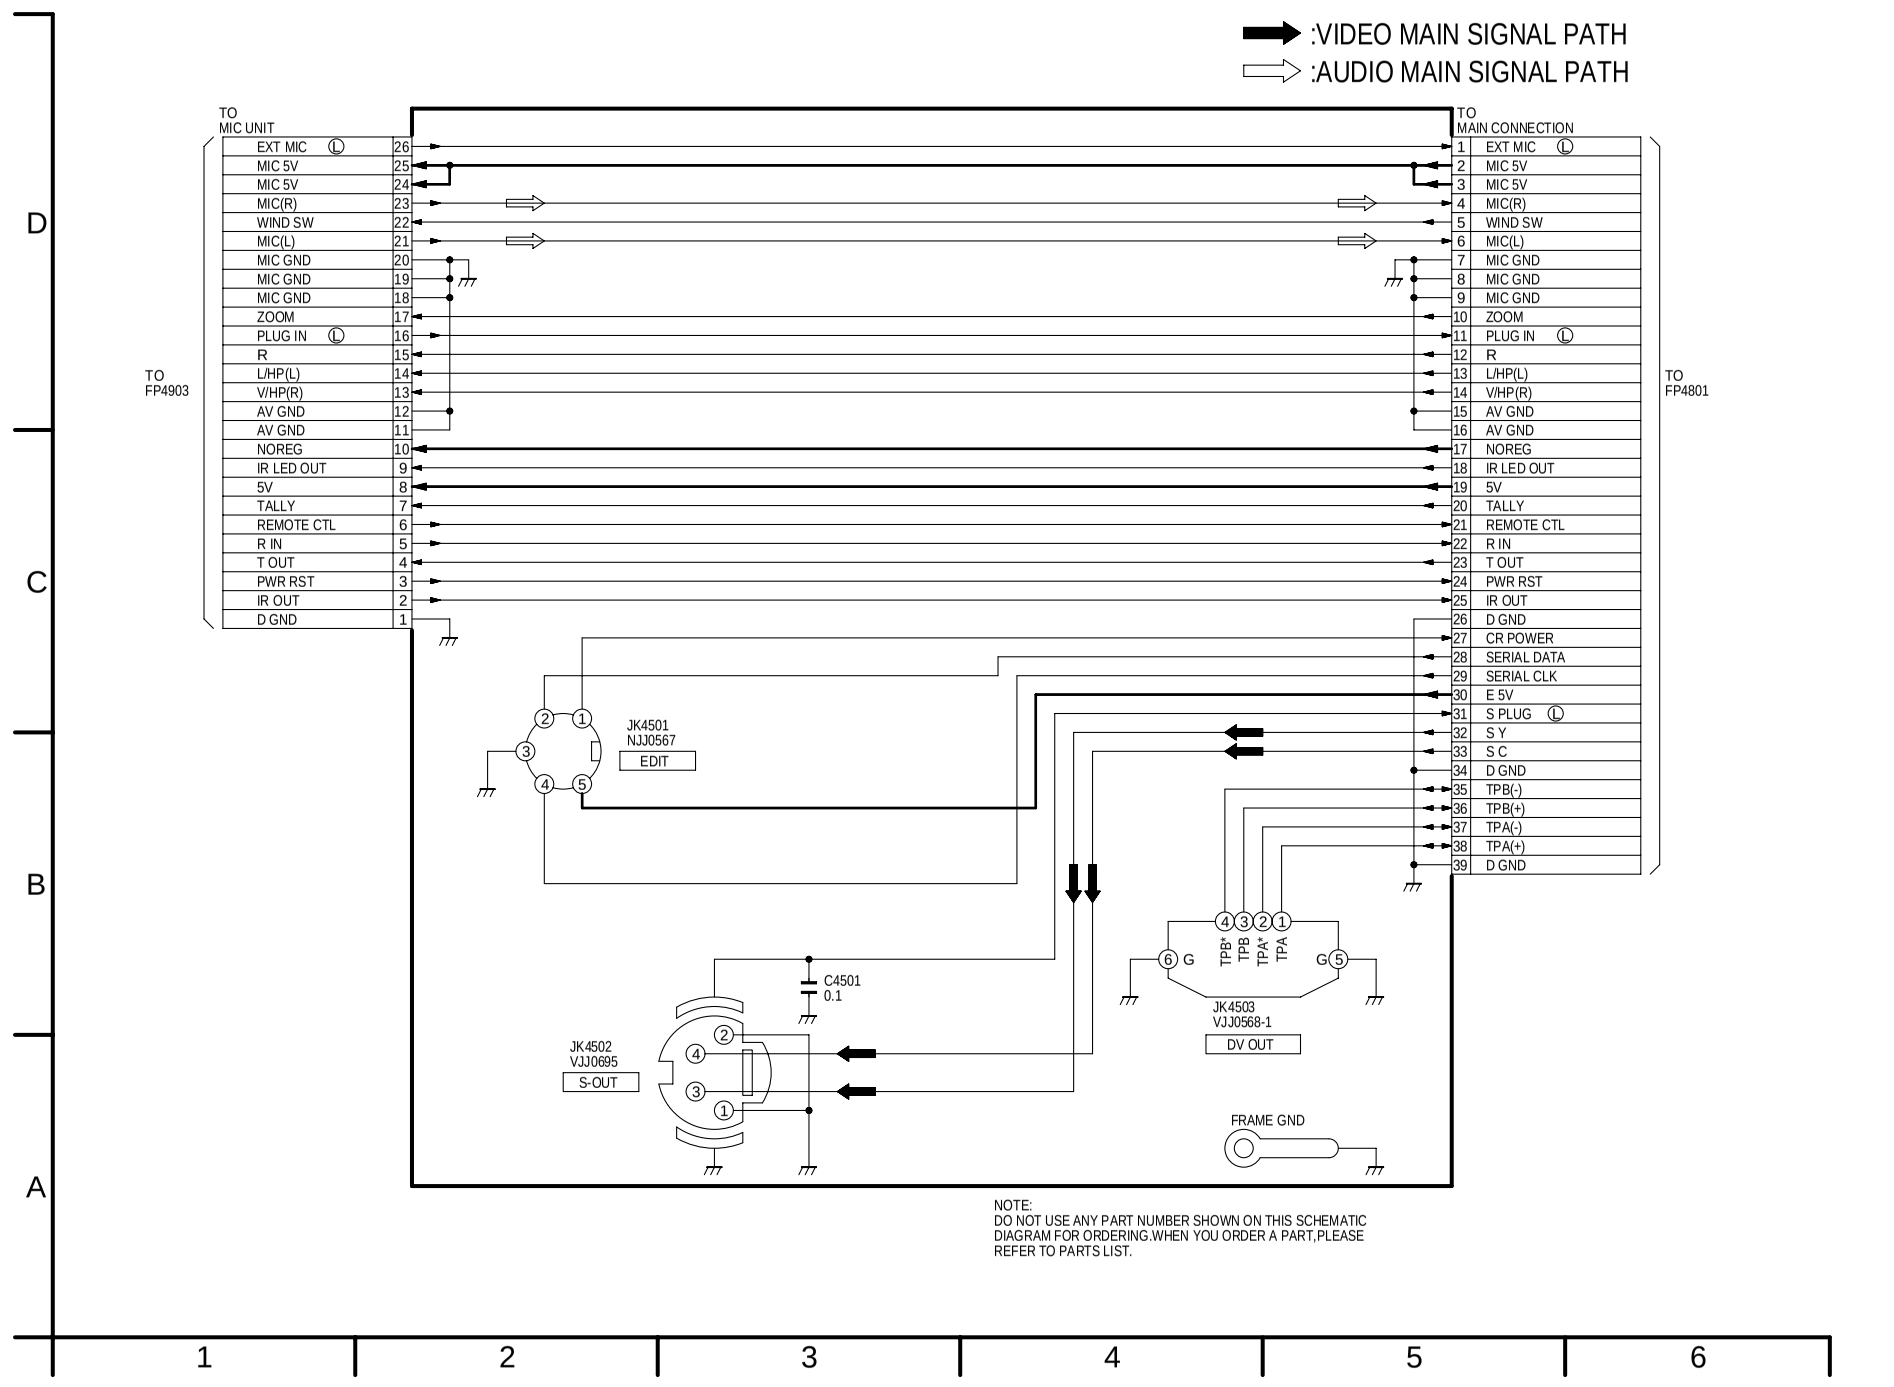
:VIDEO MAIN SIGNAL PATH
:AUDIO MAIN SIGNAL PATH
TO MIC UNIT
TO FP4903
EXT MIC (L) 26
MIC 5V 25
MIC 5V 24
MIC(R) 23
WIND SW 22
MIC(L) 21
MIC GND 20
MIC GND 19
MIC GND 18
ZOOM 17
PLUG IN (L) 16
R 15
L/HP(L) 14
V/HP(R) 13
AV GND 12
AV GND 11
NOREG 10
IR LED OUT 9
5V 8
TALLY 7
REMOTE CTL 6
R IN 5
T OUT 4
PWR RST 3
IR OUT 2
D GND 1
TO MAIN CONNECTION
TO FP4801
1 EXT MIC (L)
2 MIC 5V
3 MIC 5V
4 MIC(R)
5 WIND SW
6 MIC(L)
7 MIC GND
8 MIC GND
9 MIC GND
10 ZOOM
11 PLUG IN (L)
12 R
13 L/HP(L)
14 V/HP(R)
15 AV GND
16 AV GND
17 NOREG
18 IR LED OUT
19 5V
20 TALLY
21 REMOTE CTL
22 R IN
23 T OUT
24 PWR RST
25 IR OUT
26 D GND
27 CR POWER
28 SERIAL DATA
29 SERIAL CLK
30 E 5V
31 S PLUG (L)
32 S Y
33 S C
34 D GND
35 TPB(-)
36 TPB(+)
37 TPA(-)
38 TPA(+)
39 D GND
JK4501
NJJ0567
EDIT
C4501
0.1
JK4502
VJJ0695
S-OUT
JK4503
VJJ0568-1
DV OUT
TPB*
TPB
TPA*
TPA
G
FRAME GND
NOTE:
DO NOT USE ANY PART NUMBER SHOWN ON THIS SCHEMATIC DIAGRAM FOR ORDERING.WHEN YOU ORDER A PART,PLEASE REFER TO PARTS LIST.